

# REFRIGERATED CABINET - TEMP. -2° + 8° - 700 LT -2+8°C 1 DOOR - TOUCH CONTROL - GAS R290

Project .....  
Rev.: .....  
Zone: .....  
Location: .....



CODICE  
BFT70TNN

MODELLO  
BFT70TNN

SERIE  
REFRIGERATED  
CABINETS

## GENERAL CHARACTERISTICS

One-piece construction with AISI304 stainless steel interior and exterior finish.  
Insulation thickness 85 mm high density.  
Dashboard openable for easy periodic maintenance (condenser cleaning).  
External back and sternum base in pre-painted steel.  
Magnetic gasket on all four sides and counter-magnet on the gasket rebates.  
Ergonomic full-height handle recessed into the front of the door for easy opening in any type of installation.  
Inner compartment with 26-position moulded sides, 3 Rilsan GN2/1 grids included.  
Foamed engine compartment sides for better soundproofing and greater strength.  
Hot gas defrosting and defrost water disposal system without energy consumption.  
Indirect ventilation thanks to the full-height ducting system for optimal air circulation and uniform temperature distribution.  
Environmentally friendly refrigerant R290



## TECHNICAL SPECIFICATIONS

Internal and external in stainless steel. Sides stamped (excluding models 35/35 and 70/70). Wall insulation of 83 mm with CFC-free polyurethane.  
Dashboard openable for easy periodic maintenance (condenser cleaning).  
Touch screen control. Cell interior with rounded corners for easy cleaning. 150 mm adjustable steel feet. Automatic defrost with resistance and condensate water dissipation through hot gas. Self-closing doors with hinges. Standard lighting and lock for cell illumination. Prepared for

placement on plinth. Buffer monoblock, external to the cell, with forced ventilation from top to bottom.  
Frost-T Versions Exclusive advanced and intuitive Touch Control. At a glance, you can check all operating parameters and modify them with a few simple touches.

**REFRIGERATED CABINET - TEMP. -2° + 8° - 700 LT**  
**-2+8°C 1 DOOR - TOUCH CONTROL - GAS R290**

Project .....  
Rev.: .....  
Zone: .....  
Location: .....



CODICE  
**BFT70TNN**

MODELLO  
**BFT70TNN**

SERIE  
**REFRIGERATED  
CABINETS**

## Technical Information

| SPECIFICATION         | DATA            |
|-----------------------|-----------------|
| MATERIAL              | BFT70TNN        |
| SUPPLY                | ELECTRICS       |
| DIM. WIDTH            | 700 mm          |
| DIM. PRODUCTIVITY     | 830 mm          |
| DIM. HEIGHT           | 2080 mm         |
| NET WEIGHT            | 117 Kg          |
| PACKAGE LENGTH        | 860 mm          |
| PACKAGE WIDTH         | 760 mm          |
| PACKAGING HEIGHT      | 2220 mm         |
| PACKAGE VOLUME        | 1.45 m3         |
| GROSS PACKING WEIGHT  | 130 Kg          |
| STANDARD POWER SUPPLY | 220-240V 1N     |
| ELECTRICAL POWER      | 0.295 kW        |
| GAS/REFRIGERANT TYPE  | R290            |
| REFRIGERATION POWER   | 294             |
| CELL SIZE             | 550X710X1480 MM |
| CAPACITY              | 562 LT          |

# REFRIGERATED CABINET - TEMP. -2° + 8° - 700 LT -2+8°C 1 DOOR - TOUCH CONTROL - GAS R290


Project .....  
Rev.: .....  
Zone: .....  
Location: .....



CODICE  
BFT70TNN

MODELLO  
BFT70TNN

SERIE  
REFRIGERATED  
CABINETS

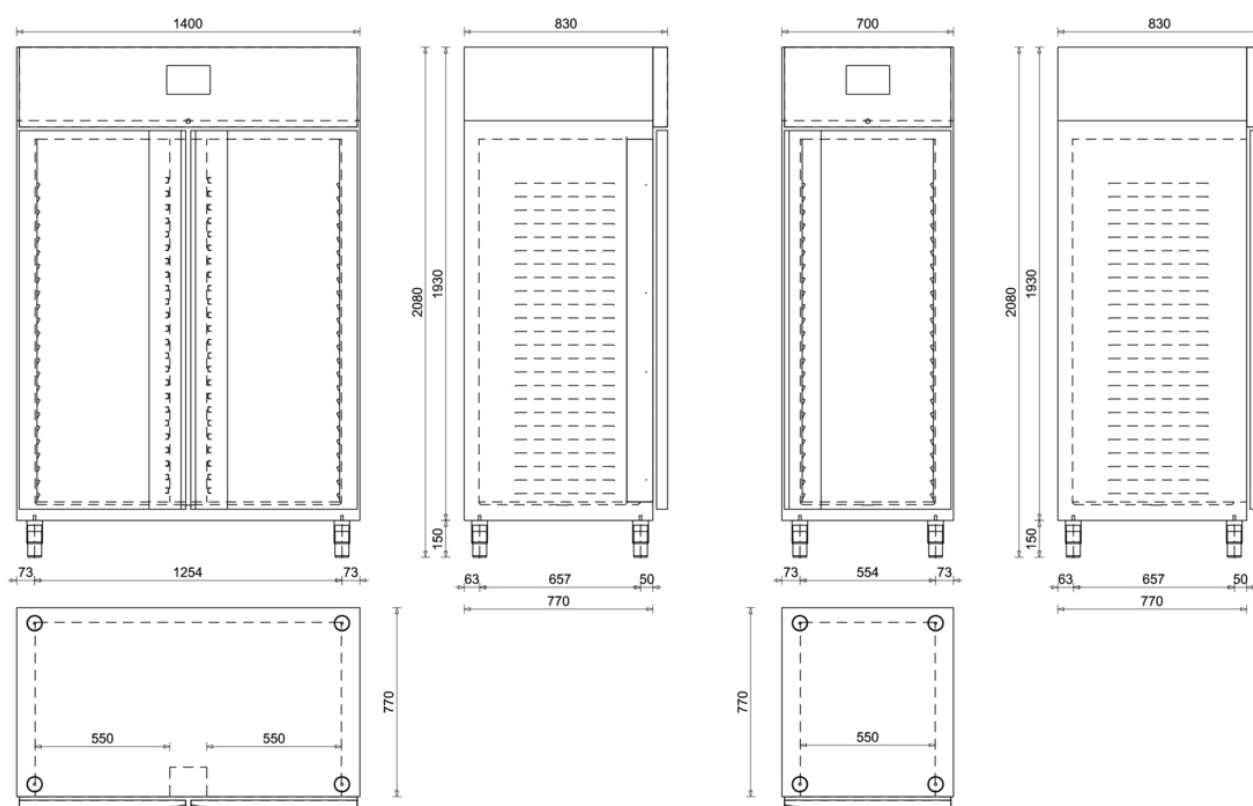

REFRIGERATED CABINET - TEMP. -2° + 8° - 700 LT  
-2+8°C 1 DOOR - TOUCH CONTROL - GAS R290

Project .....  
Rev.: .....  
Zone: .....  
Location: .....



CODICE  
BFT70TNN

MODELLO  
BFT70TNN

SERIE  
REFRIGERATED  
CABINETS

# PRODUCT'S RANGE PLUS



Optimisation of air circulation flows inside the cell thanks to the rear conveyor. Optimum air distribution under all cell load conditions.




Thanks to the R290 gas supplied as standard for all available versions, Olis guarantees care and sustainability in all aspects of its product development.



With a few simple touches you can check error lists, HACCP, alarms. All developed to facilitate every stage of work.



Moulded grid support guides. Cell with large load capacity, easy to clean thanks to the moulded grid guides. The internal volume of the cell increases by up to 30 litres compared to equivalent products on the market.

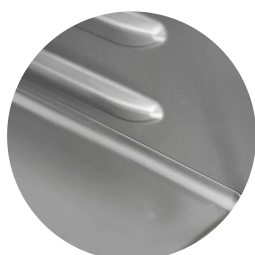

Fully radiused cell bottom.